









Fittings

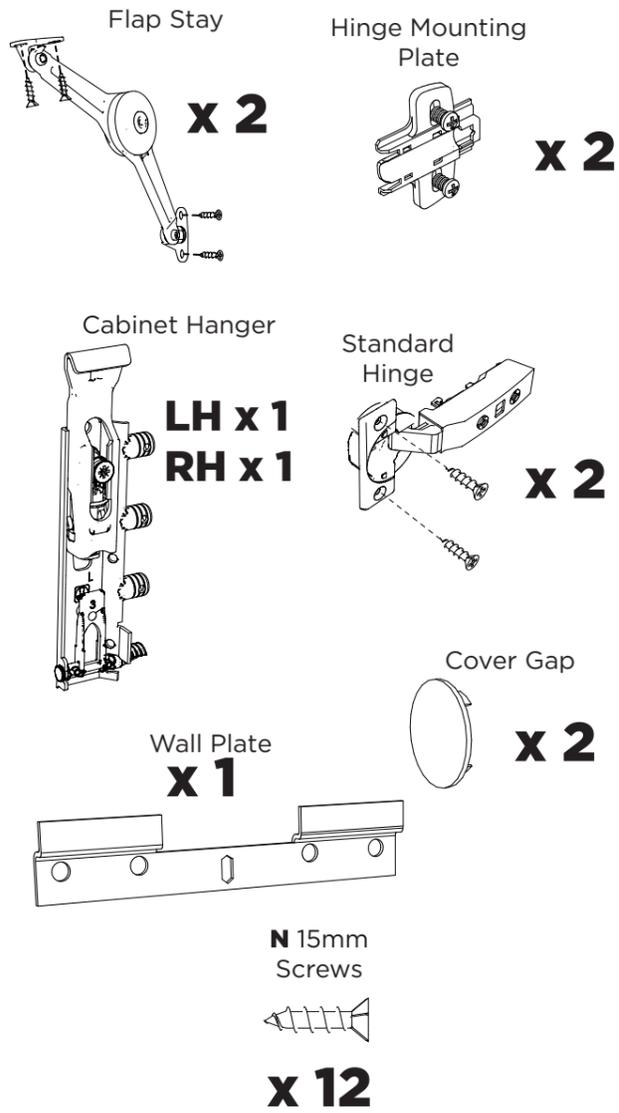

- (A)** Wall End Panel
- (B)** Top/Bottom Panel
- (C)** Back Panel
- (E)** Door

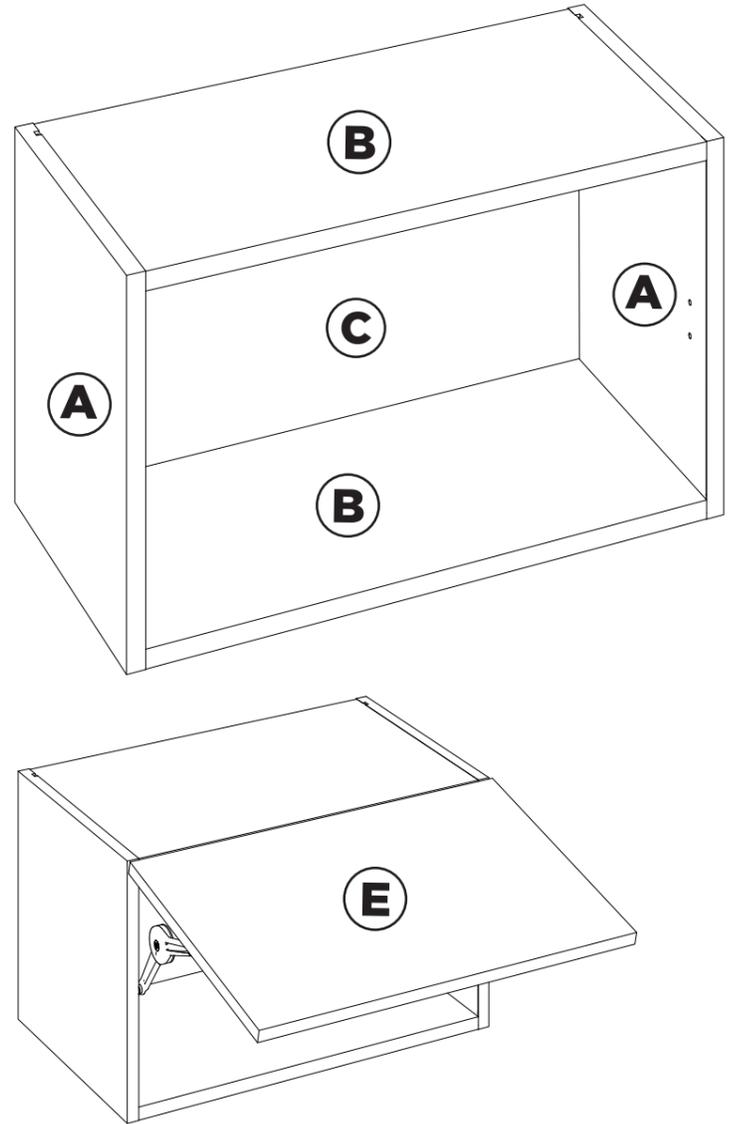


Assembly

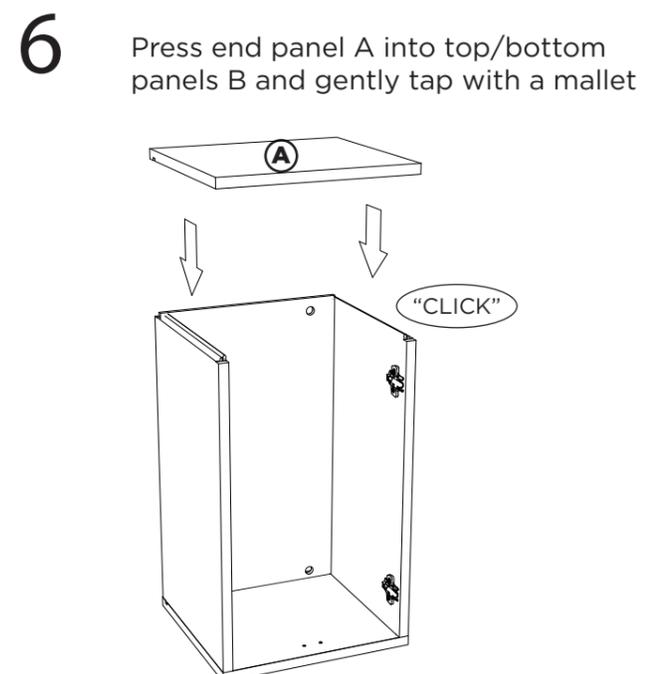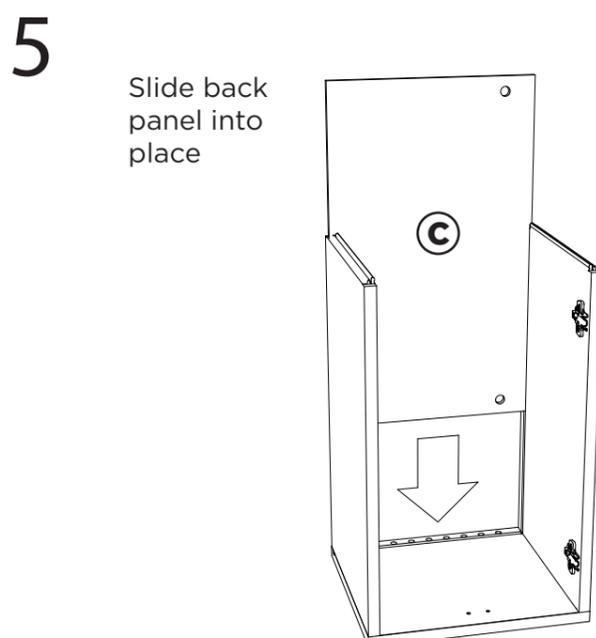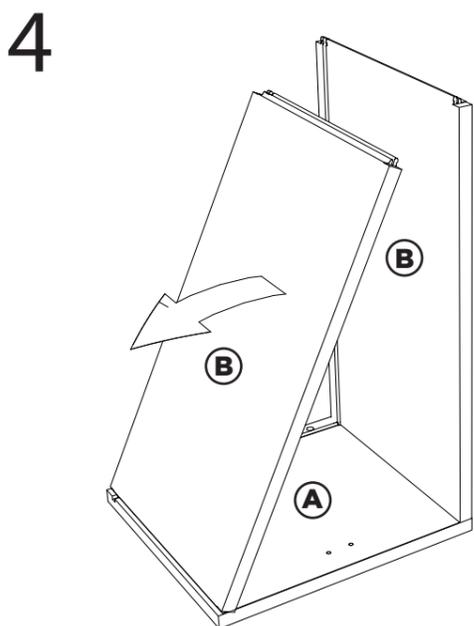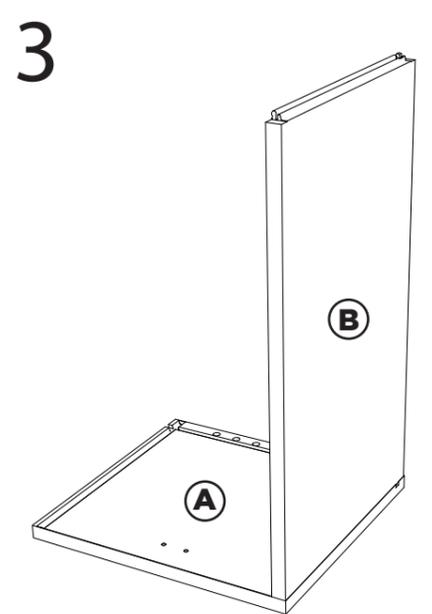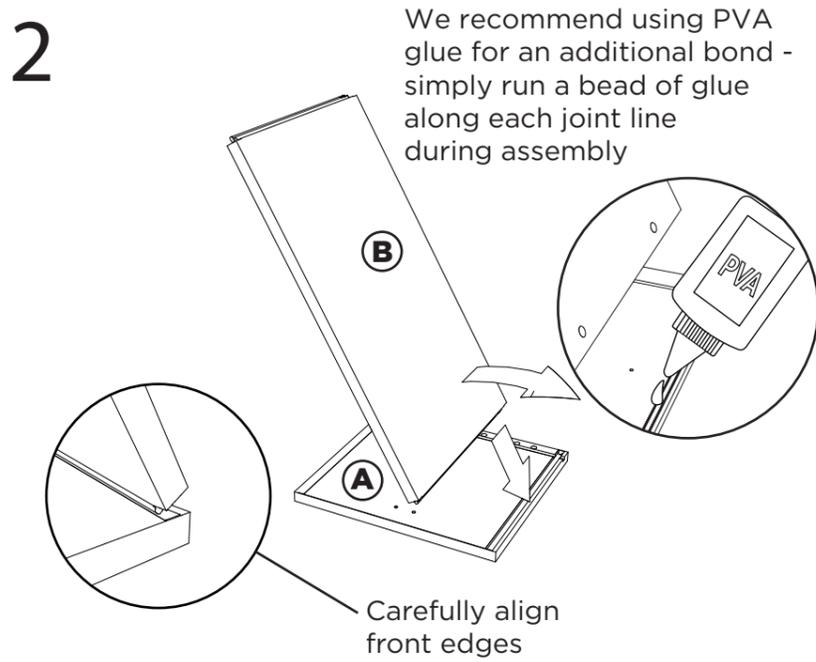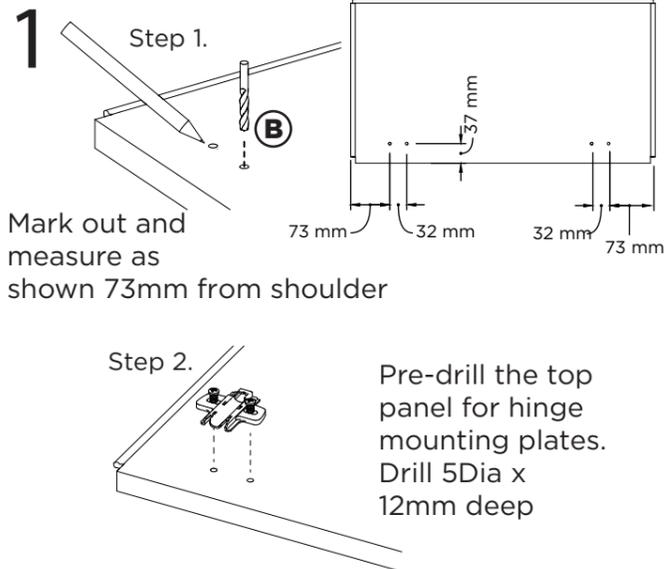


7

Mark out and measure for flap stay fitting. Drill 2Dia x 10mm deep.

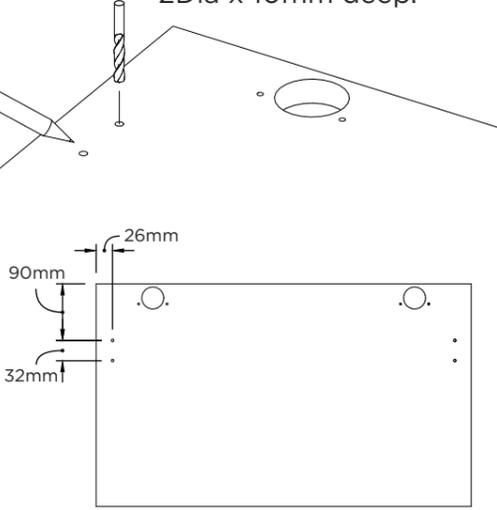


8

Ensure the hinge arm is at 90 degrees to the door before fixing in position with 15mm screws as shown

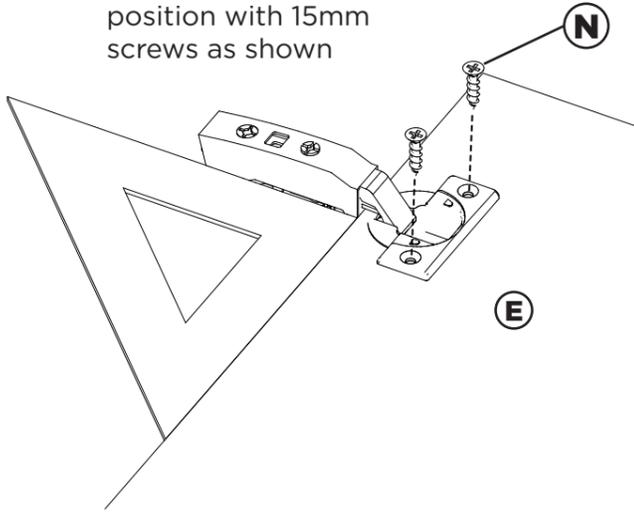


9

Screw flap stay to panel A

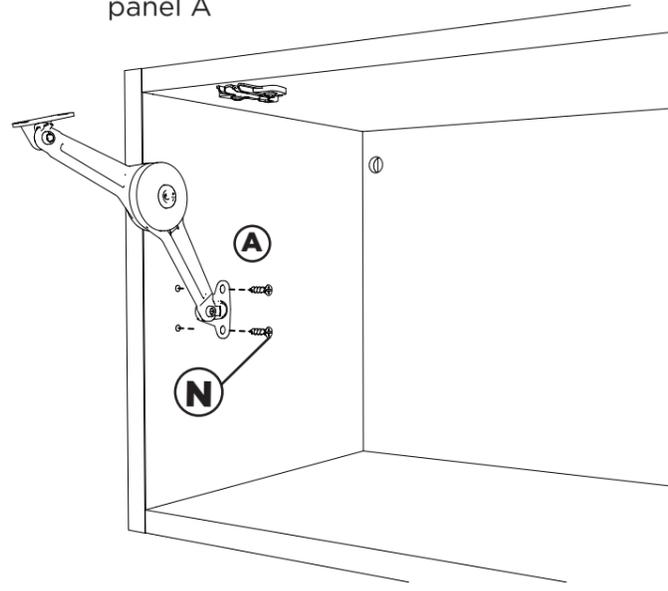


10

Insert hinges into mounting plates

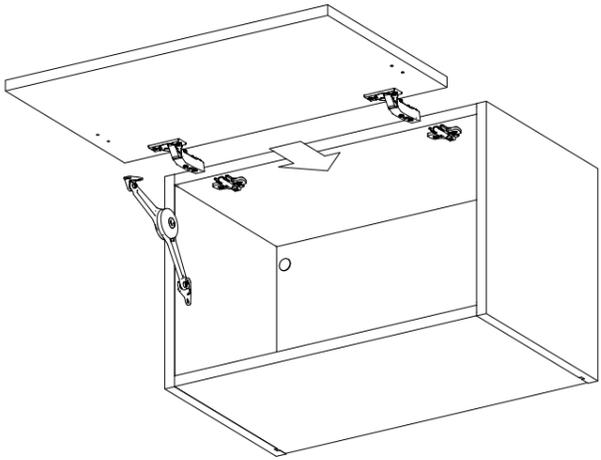


11


Screw flap stay to door

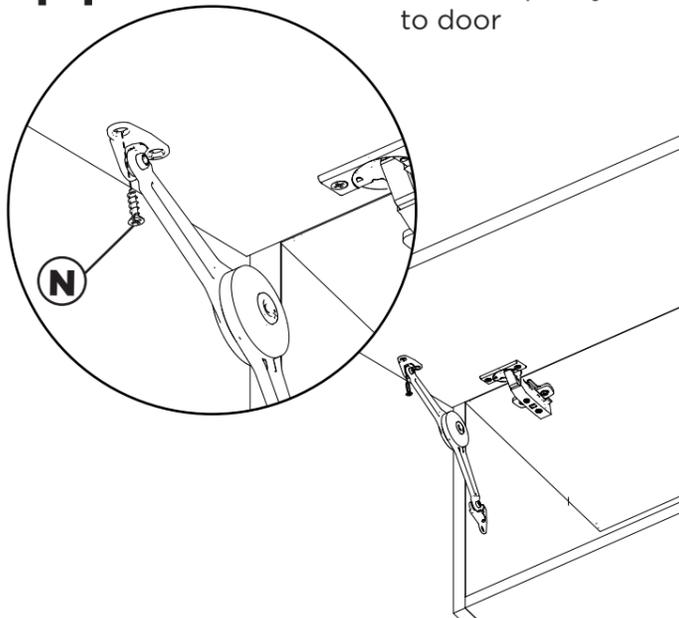


12

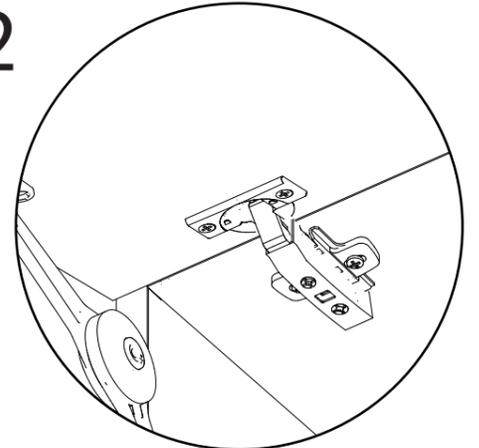

Hinge adjustment

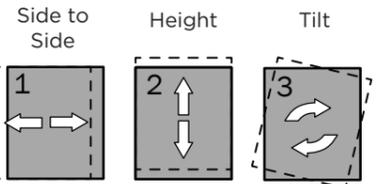


13

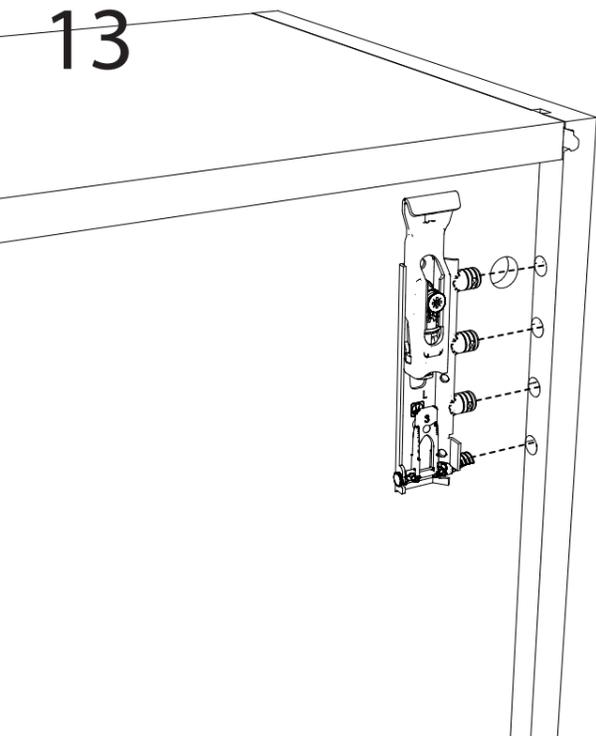

14


lower lever to lock bracket into position

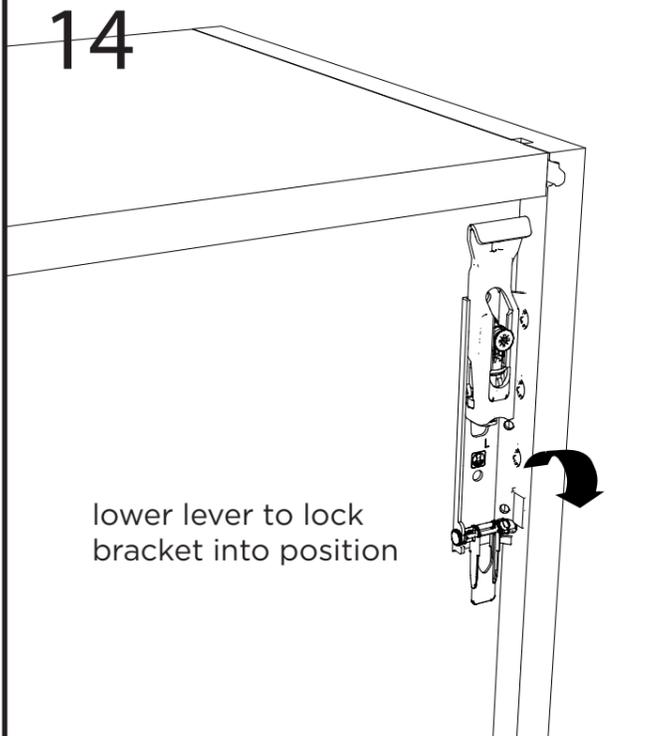

15


Attach to wall using appropriate fittings

Please note, wall fixing screws are not supplied - these should be to suit your type of wall/house build. If in doubt please ask a professional for advice.

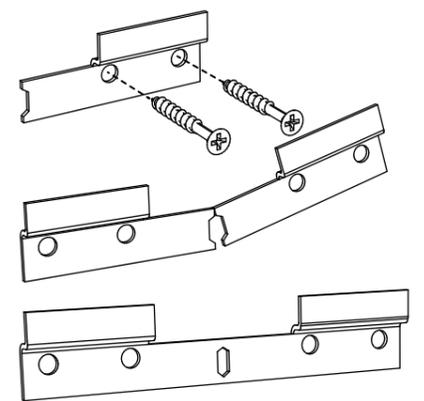

16

Wall plate position

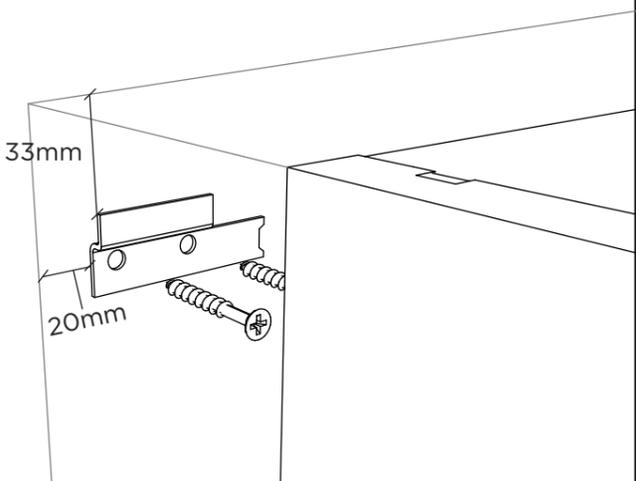


17

Distance From Wall Adjustment

Height

To Adjust Cabinet Position
Adjust lower screw first

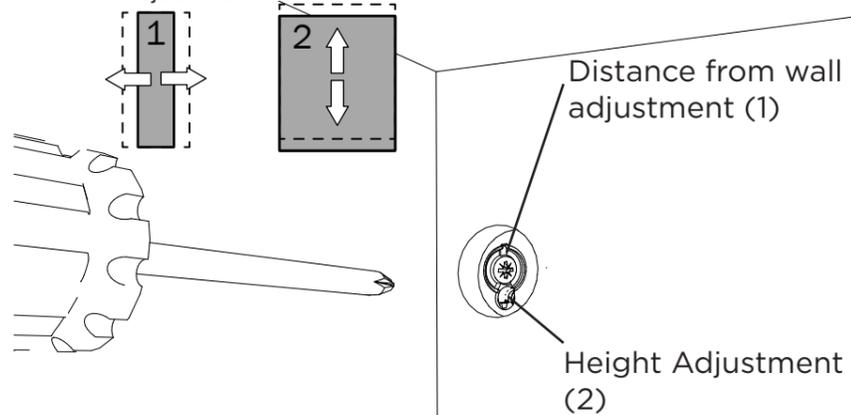

18

Fit cover gap

