






Fittings


-  Shelf Stud **x 5**
-  Turnfaster Fitting **x 2**
-  Adjustable Leg **x 5**
-  Leg Boss **x 5**
-  Springfit Dowel **x 2**
-  Centre Mullion Bracket **x 4**
-  Hinge Mounting Plate **x 2**
-  Plinth Clip **x 2**
-  Standard Hinge **x 2**
-  Circular Leg Clip **x 2**
-  **N** 15mm Screws **x 16**
-  **O** 30mm Screws **x 9**

Corner Planning

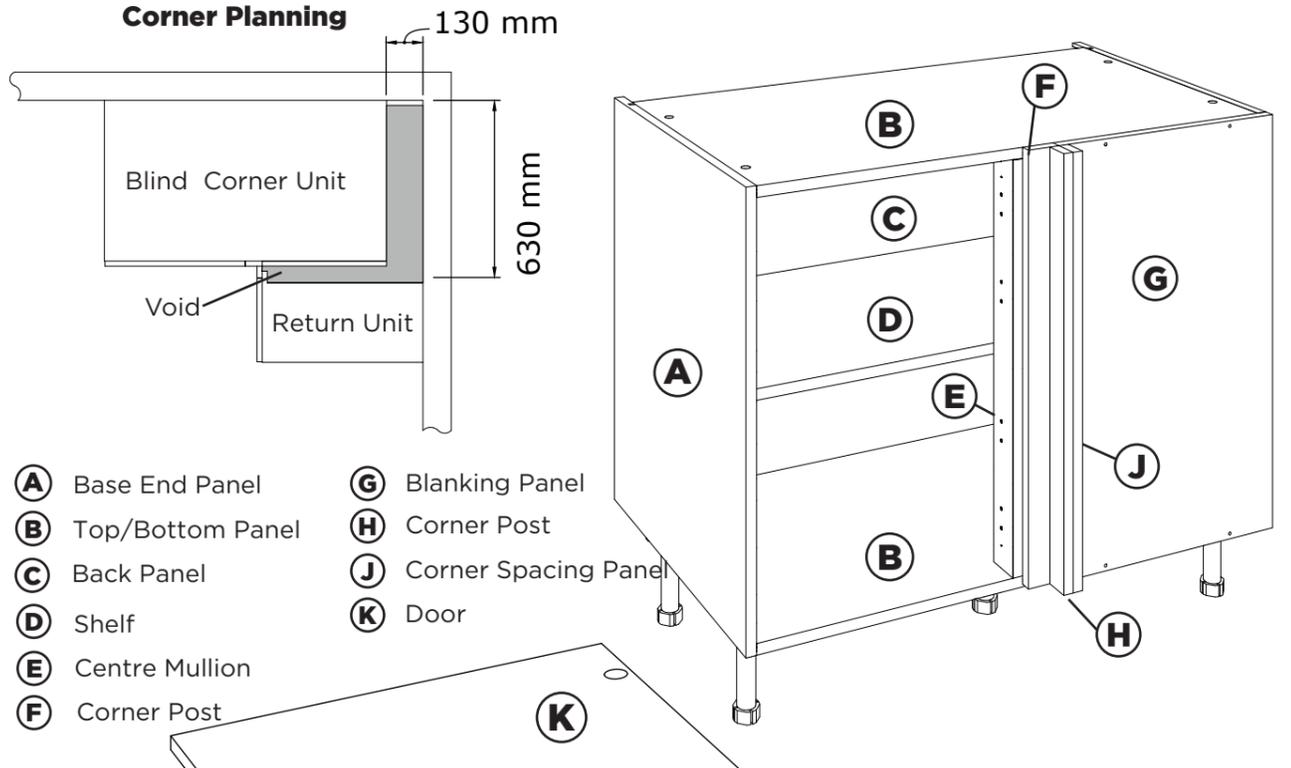


Assembly


1
Carefully align front edges

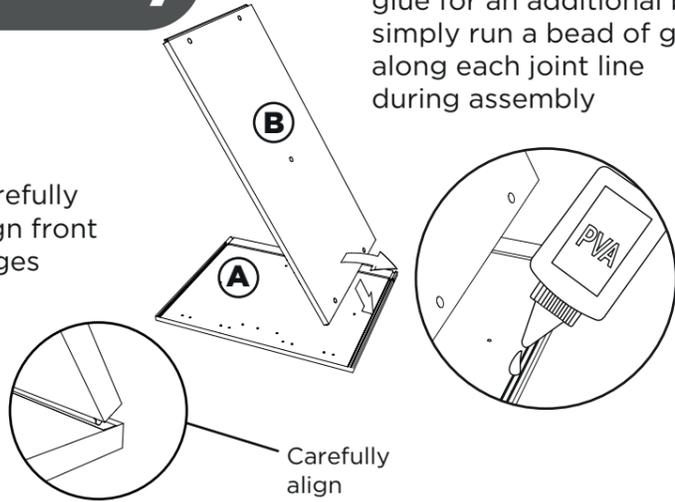

2

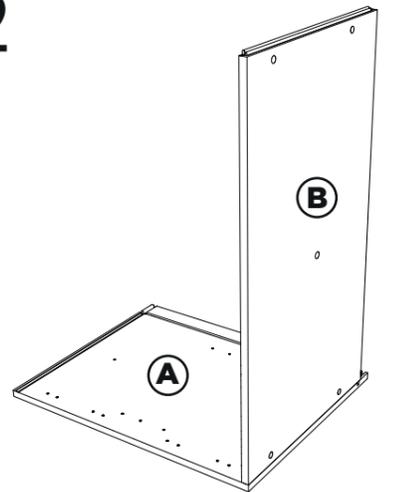


3

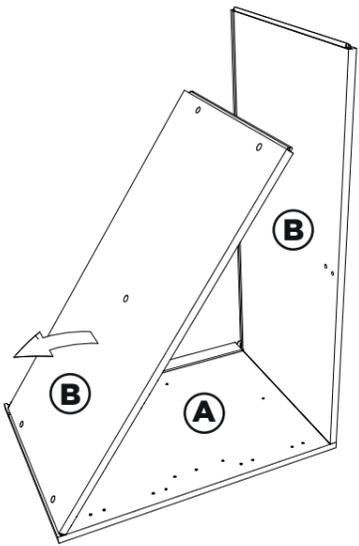


4

Slide back panel into place

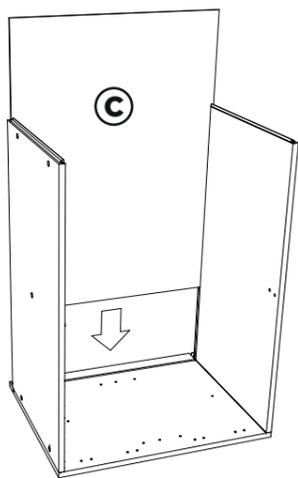


5

Press end panel A into top-bottom panels B and gently tap with a mallet

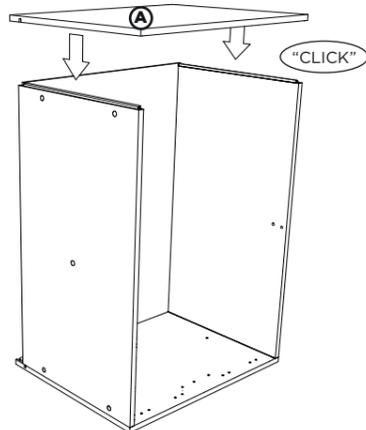


6

Insert shelf studs

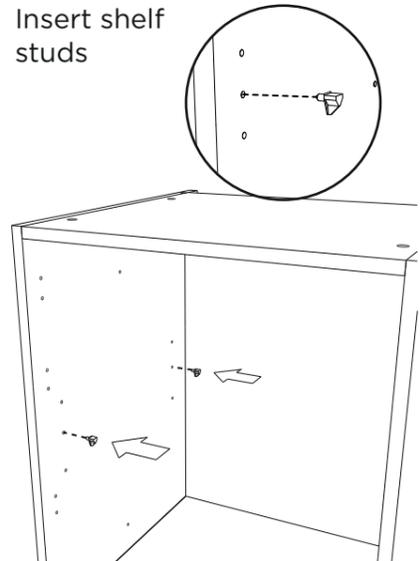

7


Gently tap leg boss into place

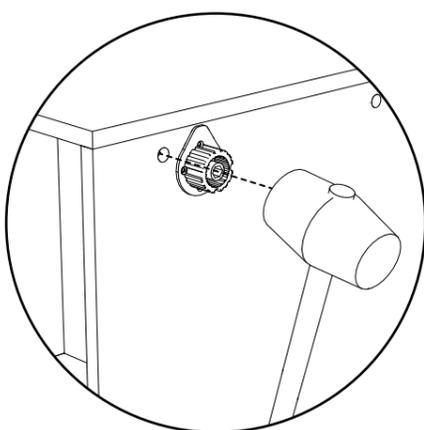


8

Insert adjustable legs into leg boss


Once assembled, measure and adjust feet to 150mm

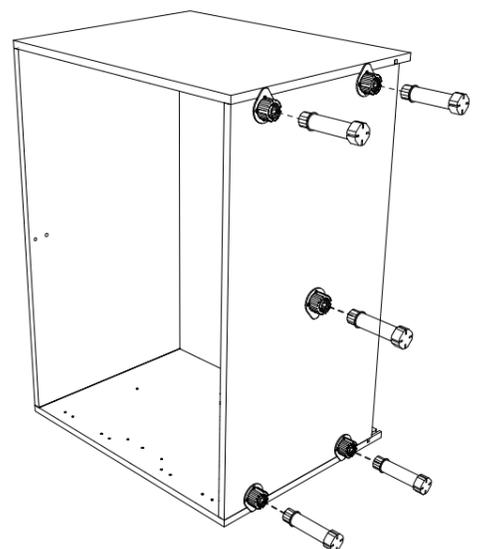

9 Insert turnfastener fittings to inside base panel B

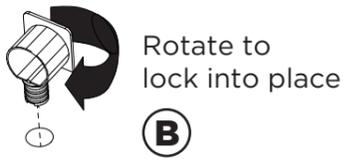


10 Press springfit dowels into top and bottom of centre mullion

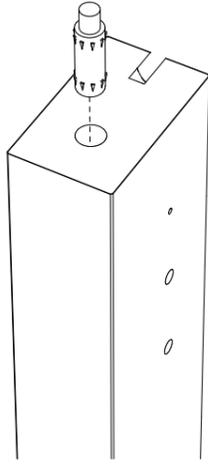


11 Once dowels are pressed in, slide centre mullion into place

Step 1

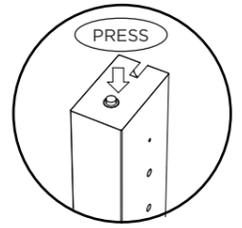


Step 2

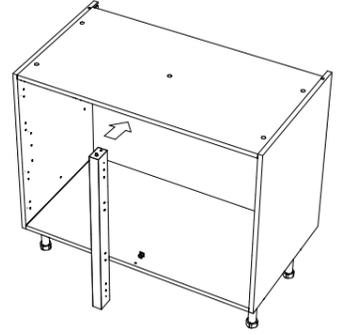


12

Attach panel G to cabinet frame - carefully align with edges of cabinet at top, bottom and side.

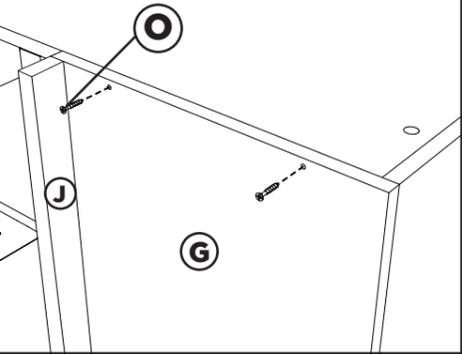


13

Assemble corner post F to corner post H using 30mm screws

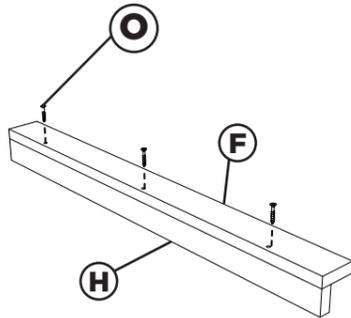


14

Tip 'clamp corner posts in position'


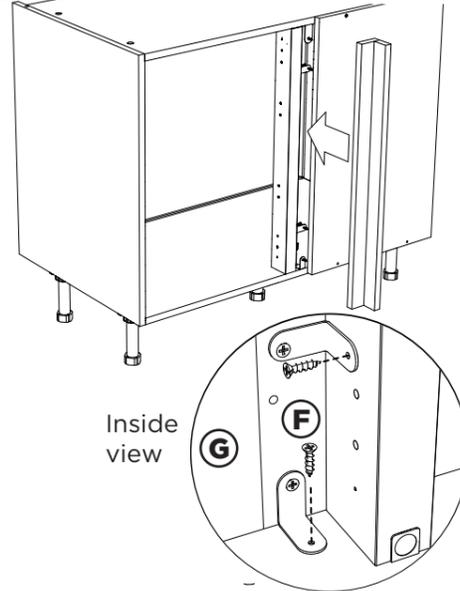


15

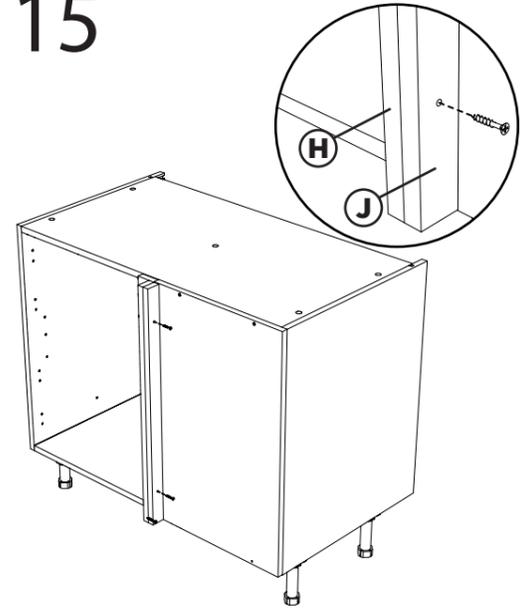


16

Insert shelf studs and slide shelf D into position

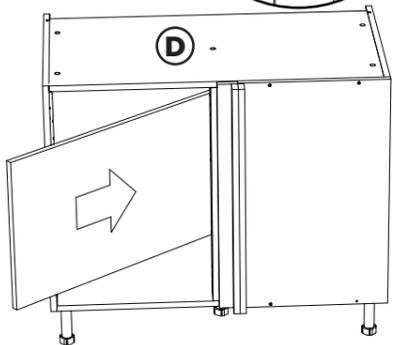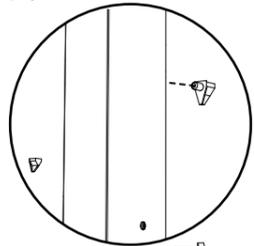


17

Attach plinth clip to plinth

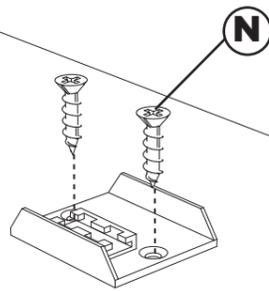


18

Slide circular leg clip into plate

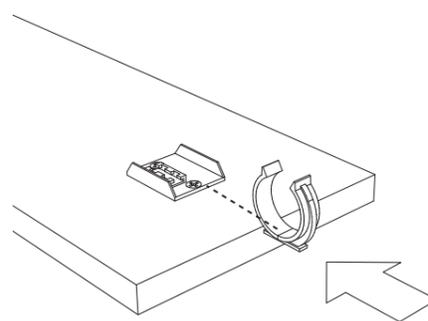

19


Fix plinth into place

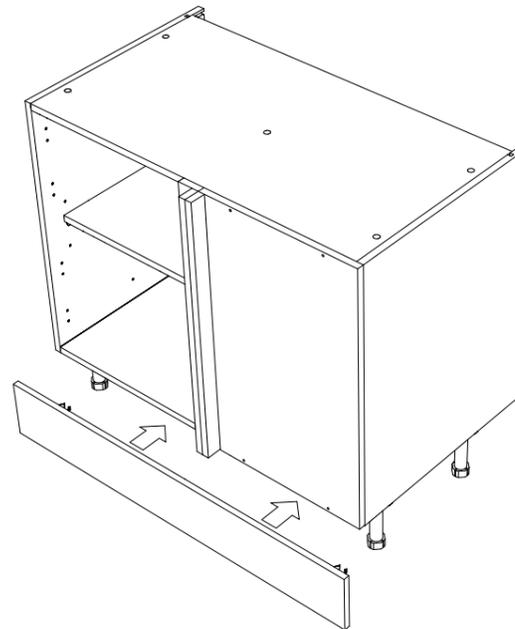

20


Attach hinge mounting plate to centre mullion

Ensure the front edge faces forward as shown

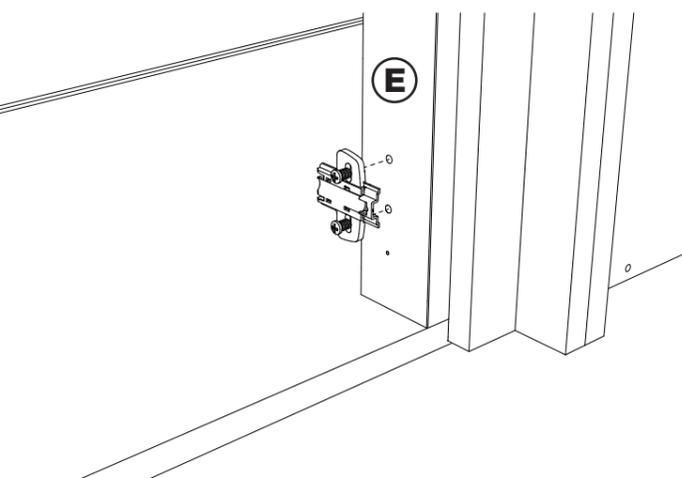

21

Ensure the hinge arm is at 90 degrees to the door before fixing in position with 15mm screws as shown

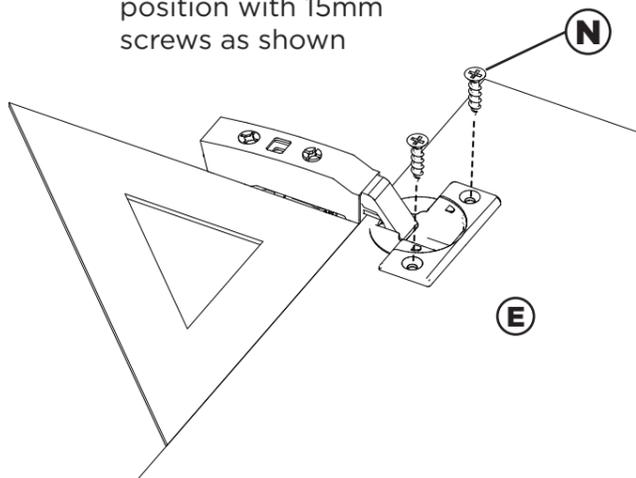

22

